

## Mounting a fine sieve as dust protection in the M1 / M3 coaxial loudspeakers

### Step 1


Remove the front grille.



### Step 2

The HF horn is mounted with three hexagon socket screws.



To remove the screws, carefully peel back the black adhesive tape which covers the screws until it is possible to turn the screw with a hex key. Do not completely remove the tape, as it must be reapplied when the horn is removed. Remove the three screws, and pull the horn forwards to remove it.

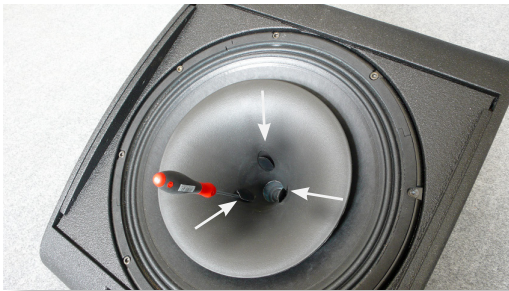

### Step 3

Carefully clean out any dust or dirt with a vacuum cleaner set to low power.

Place the prepared fine sieve (ø 35 mm) over the grille of the HF driver.

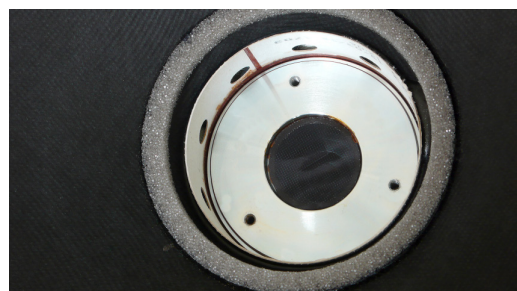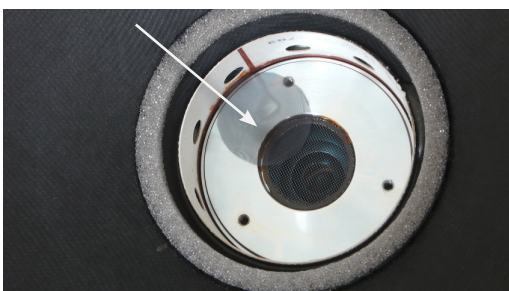

### Step 4

The horn can now be re-installed. The fine sieve is held in place by the horn.

Once the horn is in place and the screws tightened, press the adhesive tape firmly back into its original position.

Remount the front grille on the loudspeaker.